EK-603 Local Interface Kit
INSTALLATION MANUAL

Applied Machines: C353/C253/C203/C353P/mc8650
COLOR MFP (Color/B&W): 35 ppm / 35 ppm, 25 ppm / 25 ppm, 20 ppm / 20 ppm
COLOR PRT (Color/B&W): 35 ppm / 35 ppm
Product Code: A02E

I. Accessory parts

No.	Name	Shape	Q'ty
1.	Local interface board	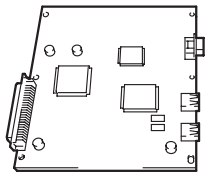 A00JIXC076DA	1
2.	Mounting bracket	 A00JIXC077DA	1
3.	Shoulder screw A	4037IXC097DB	2
4.	Shoulder screw B	A00JIXC078DA	2
5.	Screw (3 × 6 mm)	A090IXC001DA	3
6.	Connector cover	A00JIXC079DA	1
7.	Installation manual	 4980IXC019DA	1 set

⚠WARNING

After unpacking, be sure to get rid of the packaging materials and keep them out of the reach of children.

Putting the head in the plastic bag involves danger of suffocation.

II. When installing to C353P/mc8650

This manual provides the illustration of the machine used as MFP. However, the same installation procedure is used for C353P/mc8650.

III. Installation procedures

<When the machine is already equipped with MK-711>

1. Turn off the machine and unplug the power cord from the power outlet.
2. Remove the shield box cover (four screws).

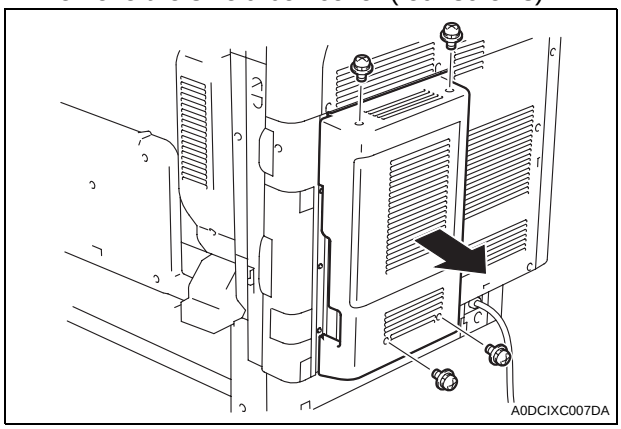
A0DCIXC007DA

3. Pull out the filter from the rear right of the machine.

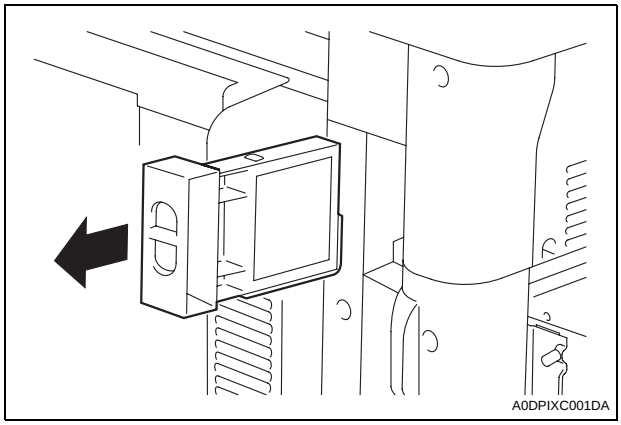
A0DPIXC001DA

4. Open the right door.
5. Open the right rear door.
6. Remove the right rear cover (five screws).

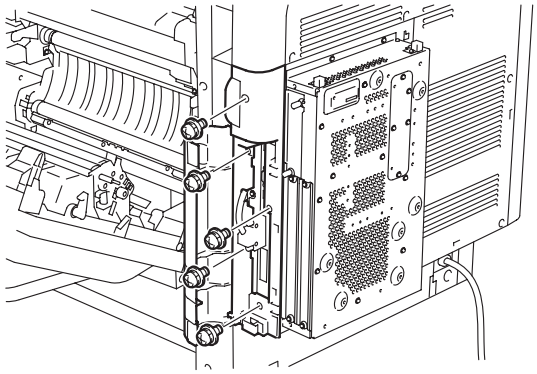

7. Remove the shield cover (two screws).

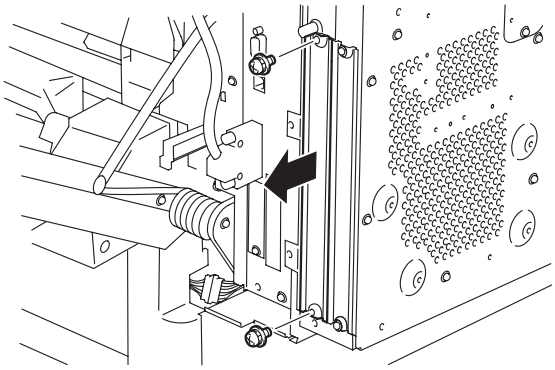

8. Install the mounting bracket to the local interface board (three screws and two shoulder screw B's furnished with the kit).

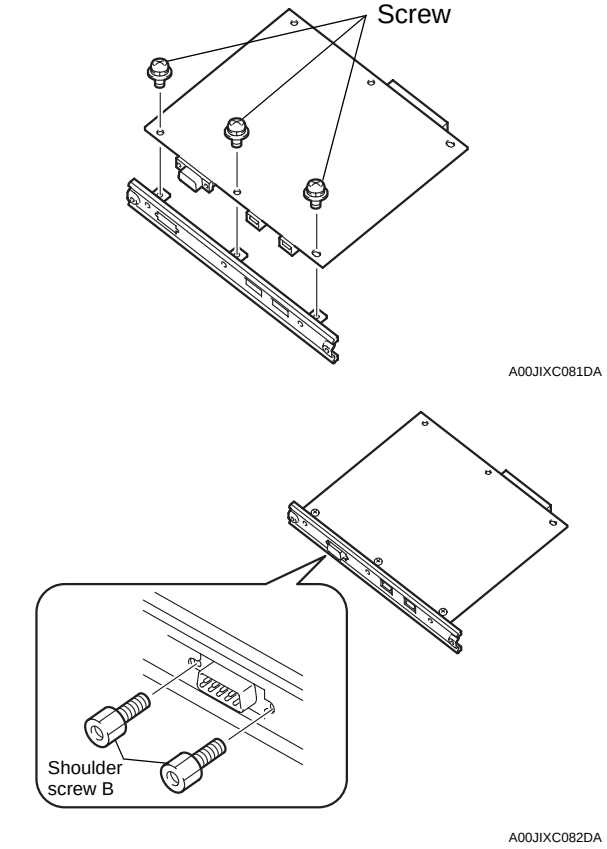

9. Mount the two shoulder screw A's furnished with the kit.

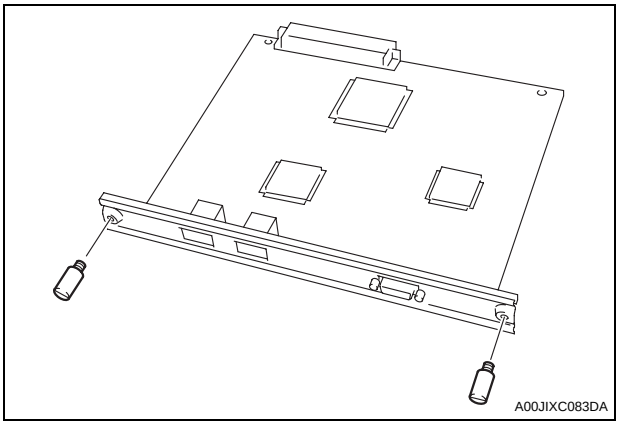

10. Insert the local interface board assy into the machine and secure it by tightening the shoulder screws.

Note:

When inserting the board, align it with the slits in the machine.

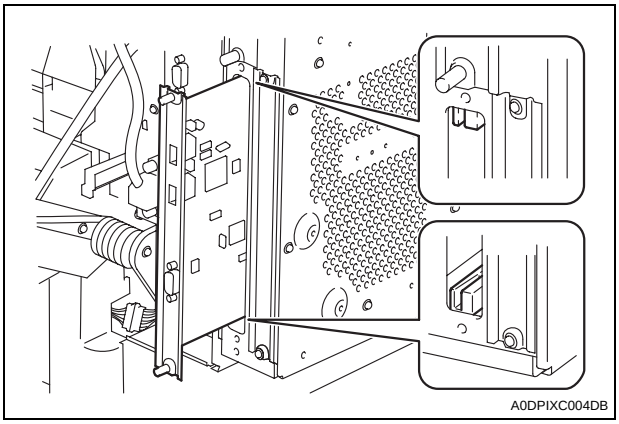

11. Reinstall the right rear cover that has been removed in step 6 (five screws).
12. Close the right rear door.
13. Close the right door.
14. Insert the filter that has been pull out in step 3.
15. Reinstall the shield box cover that has been removed in step 2 (four screws).
16. Install the connector cover furnished with the kit.

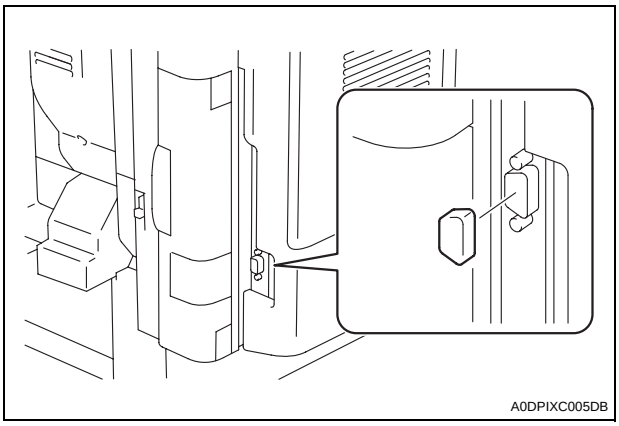

<When both the fax kit and MK-711 are installed at one time>

1. Turn off the machine and unplug the power cord from the power outlet.
2. Remove the shield cover (two screws).

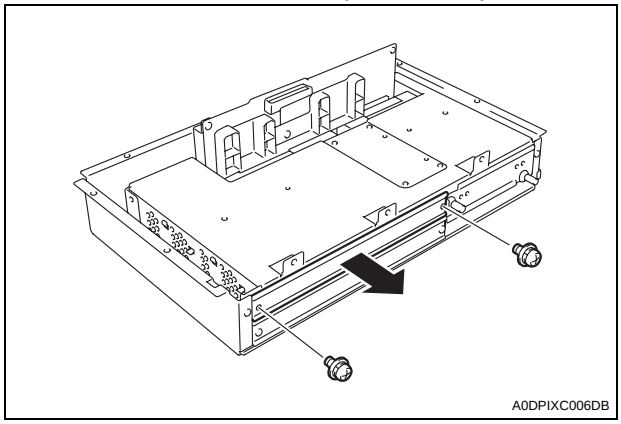

3. Install the mounting bracket to the local interface board (three screws and two shoulder screw B's furnished with the kit).

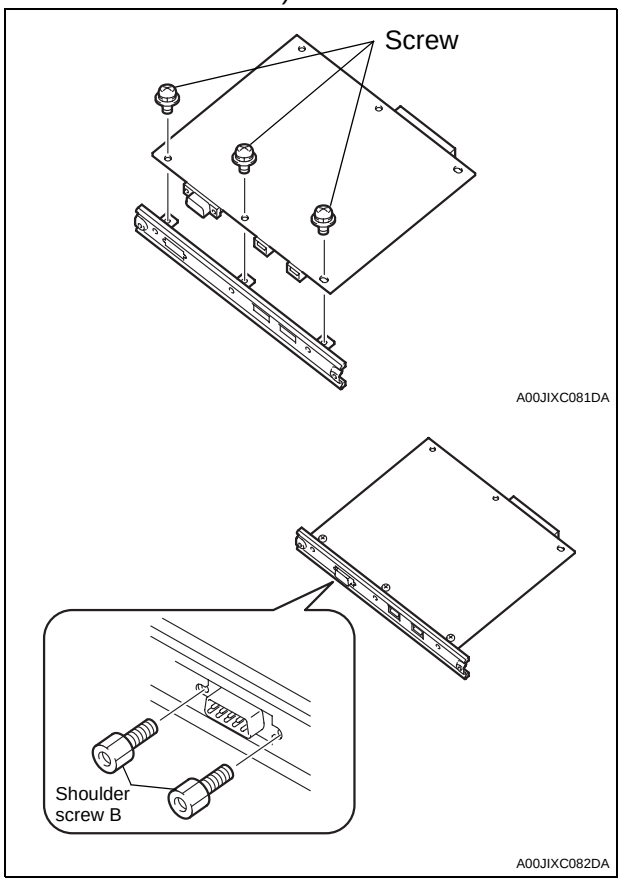

4. Mount the two shoulder screw A's furnished with the kit.

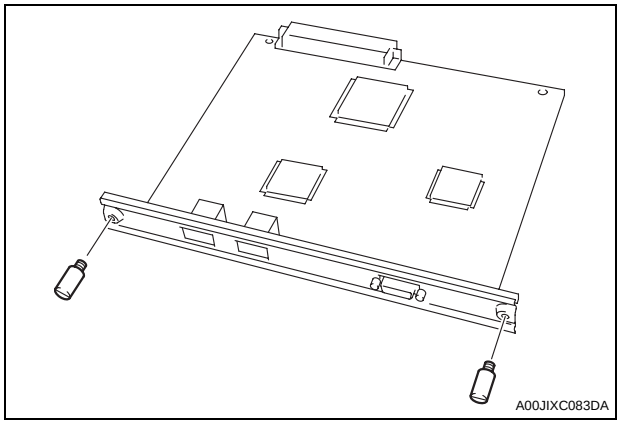

5. Insert the local interface board assy into the machine and secure it by tightening the shoulder screws.

Note:

When inserting the board, align it with the slits in the machine.

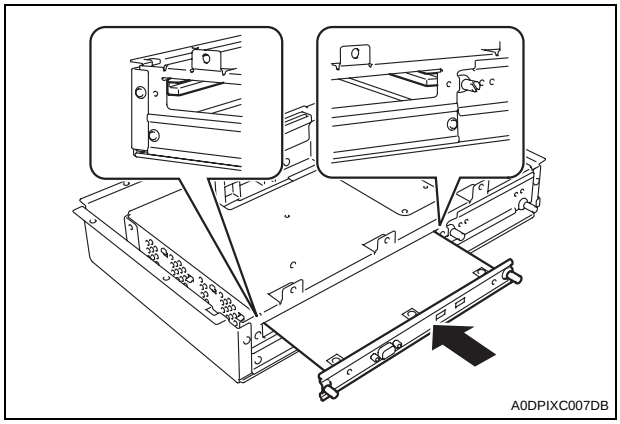

6. Mount the MK-711 (mount kit) to the machine.

Note:

For installation procedures, refer to the installation manual for MK-711 (mount kit).

7. Install the connector cover furnished with the kit.